



Door lock removal

Tools Required:

#25 Torx driver

small screwdriver or awl

This is door handle assembly. The round plug covers the emergency lock cylinder.



On the inner side of the door on the rear edge you will see these 2 Torx #25 screws. Remove them.



Once the 2 screws are removed the handle will slide to the rear about 3/4 of an inch and then pull away from the door.



This is the view from the top after the handle is pulled away from the door.



**On the back of the lock cylinder this cable is attached.
Disconnect it as shown.**



Depress this spring retainer on the side of the door lock with a small screwdriver or awl to release it from the handle and slide the lock out of the handle.



This is the lock cylinder removed from the car. This is the piece we need.

